

BRIDGESTONE BY ROCKFORD

PART NUMBER	DESCRIPTION	PART NUMBER	DESCRIPTION
E 02115	1 USE 2141 3001 STUD	E 05311	4 USE 2461 3004 GEAR
E 02163	USE 09090 103 SEAL	E 05312	2 USE 2456 3002 GEAR
E 02201	2 USE 2130 3000 CASE	E 05313	2 USE 2451 3002 GEAR
E 02311	2 USE 2161 3002 COVER	E 05314	5 USE 2446 3005 SHAFT
E 02411	3 USE 2151 3003 CASE	E 05315	0 USE 09006 101 RING
E 02412	1 USE 2153 3001 COVER	E 05316	3 USE 2483 3003 SPACR
E 02502	1 USE 2164 3001 GAGE	E 05317	1 USE 2484 3001 SPRKT
E 02512	1 USE 2138 3001 CASE	E 05319	2 USE 2481 3002 SPACR
E 02513	2 USE 2145 3002 HOLD	E 05321	USE 2484 3010 SPRKT
E 02514	USE 2129 3000 CLAMP	E 05322	1 USE 2452 3001 BUSH
E 02515	USE 09058 101 PLUG	E 05323	USE 2487 3000 WASH
E 02516	USE 09057 101 PIN	E 05324	USE 2486 3000 RING
E 02517	1 USE 2125 3001 COVER	E 05326	USE 09047 101 WASH
E 02518	1 USE 2119 3001 COVER	E 05327	USE 09021 101 NUT
E 02519	3 USE 2126 3003 HOLDER	E 05411	USE 07 6302 03 BEAR
E 02611	USE 09090 105 SEAL	E 06102	2 USE 2554 3002 PLATE
E 02612	USE 09090 104 SEAL	E 06103	USE 2530 3000 STOP
E 02613	USE 09090 103 SEAL	E 06104	1 USE 2555 3002 STOP
E 02614	USE 09090 101 SEAL	E 06111	1 USE 2511 3001 SHAFT
E 02615	USE 09066 101 RING	E 06113	1 USE 2551 3001 SPRNG
E 02621	1 USE 2181 3001 PACK	E 06113	2 USE 2551 3002 SPRNG
E 02622	1 USE 2183 3001 GASKET	E 06114	2 USE 2552 3002 WASH
E 02623	USE 2187 3100 GASKET	E 06115	USE 09041 102 WASH
E 02624	USE 2188 3000 GASKET	E 06116	1 USE 09002 101 RING
E 02631	USE 09064 101 GASKET	E 06117	USE 09004 101 RING
E 02632	USE 09064 102 GASKET	E 06133	1 USE 2538 3001 SPRNG
E 03101	1 USE 1301 3001 SHAFT	E 06201	2 USE 2510 3002 ARM
E 03122	1 USE 1334 3001 BUSH	E 06221	1 USE 2517 3001 SPRNG
E 03123	NUT AVAILABLE	E 06301	1 USE 2520 3001 DRUM
E 03124	NUT AVAILABLE	E 06313	3 USE 2549 3003 PLATE
E 03125	NUT AVAILABLE	E 06314	1 USE 09041 104 WASH
E 03126	USE 09049 101 SHIM	E 06315	1 USE 0411-0613 WASH
E 03127	USE 09049 102 SHIM	E 06322	3 USE 2541 3003 FORK
E 03210	25 USE 1342 3001 PISTON	E 06323	1 USE 2544 3001 GUIDE
E 03210	50 USE 1343 3001 PISTON	E 06324	USE 09047 102 WASH
E 03210	3 USE 1341 3003 PISTON	E 07101	2 USE 2620 3000 SHAFT
E 03211	3 USE 1341 3003 PISTON	E 07121	1 USE 2631 3001 GEAR
E 03212	USE 1305 3000 RINGS	E 07122	4 USE 2632 3004 ARM
E 03213	0 USE 1305 3000 RINGS	E 07123	1 USE 2633 3001 RATCH
E 03214	USE 1381 3000 PIN	E 07124	USE 2634 3000 SPRNG
E 03215	USE 1382 3000 CLIP	E 07125	USE 2635 3000 STOP
E 03221	USE 1342 3001 PISTON	E 07126	1 USE 09041 105 WASH
E 03222	USE 1343 3001 PISTON	E 07128	USE 09006 104 RING
E 03223	USE 1306 3000 RINGS	E 07211	USE 2636 3000 SPRNG
E 03224	USE 1307 3000 RINGS	E 07212	1 USE 2637 3001 HOOK
E 03225	USE 1306 3000 RINGS	E 07213	USE 09041 106 WASH
E 03226	USE 1307 3000 RINGS	E 07215	USE 09006 101 RING
E 03241	USE 1305 3000 RINGS	E 07311	NOT USED
E 03242	USE 1306 3000 RINGS	E 08100	5 USE 1600 3005 CARB
E 03243	USE 1307 3000 RINGS	E 08111	0 CARBURETOR BODY
E 03311	USE 07 6303 03 BEAR	E 08121	VALVE
E 03312	USE 07 6003 01 BEAR	E 08122	USE 1615 3102 JET
E 03313	USE 09041 101 WASHER	E 08123	NOT AVAILABLE
E 03314	USE 0671 3013 KEY	E 08124	CIRCLIP
E 03315	USE 1382 3000 CLIP	E 08128	CABLE ADJUSTER
E 04100	USE 2200 3000 CLUTH	E 08129	USE 1623 3020 NUT
E 04102	3 USE 2220 3003 HUB	E 08144	IDLE JET
E 04111	1 USE 2211 3001 PLATE	E 08145	MAIN JET
E 04112	2 USE 2214 3002 PLATE	E 08146	U RING
E 04113	1 USE 2215 3001 PLATE	E 08153	LEVER
E 04114	1 USE 2216 3001 PLATE	E 08161	FLOAT NEEDLE
E 04115	1 USE 2218 3001 SPRNG	E 08162	STARTER JET
E 04116	USE 2224 3000 RING	E 08163	NUT AVAILABLE
E 04117	USE 2225 3000 RING	E 08164	FLOAT
E 04201	3 USE 2260 3003 ARM	E 08165	FLOAT PIN
E 04311	1 USE 2265 3001 SCREW	E 08166	FLOAT CHAMBER
E 04313	USE 09045 101 WASHR	E 08167	COVER
E 04314	USE 2269 3000 HANGR	E 08168	NOT AVAILABLE
E 04315	USE 2271 3000 SPRNG	E 08171	NOT AVAILABLE
E 04316	USE 2186 3000 GASKT	E 08200	2 NOT AVAILABLE
E 04411	USE 2231 3000 RACE	E 08200	3 USE 6201 3003 CLEAN
E 04412	USE 0611 0516 BALL	E 08201	NOT AVAILABLE
E 04414	USE 09029 102 NUT	E 08202	COVER
E 04428	USE 2335-3100 HOLDR	E 08203	USE 6201 3003 CLEAN
E 05111	USE 1385 3000 GEAR	E 08205	USE 6211 3000 ELEM1
E 05112	2 USE 2411 3002 GEAR	E 08231	ELEMENT
E 05113	1 USE 2478 3001 BUSH	E 08231	3 NOT USED
E 05114	2 USE 2479 3002 BOLT	E 08240	AIR PIPE OLD STYL
E 05115	2 USE 0441 1221 WASHR	E 08241	USE 6241 3010 PIPE
E 05211	4 USE 2431 3004 GEAR	E 08245	FUEL PIPE
E 05212	2 USE 2426 3002 GEAR	E 08301	1 USE 1820 3011 COVER
E 05213	1 USE 2421 3001 SHAFT	E 08304	BATTERY BAND
E 05214	1 USE 2476 3001 SPACR	E 08309	NUT AVAILABLE
E 05215	1 USE 09006 101 RING	E 08312	USE 1822 3000 CAP

PART NUMBER	DESCRIPTION
E 08321	2 USE 1841 3002 COVER
E 08325	USE 09504-101 RING
E 08327	USE 1843 3000 SPACR
E 08330	KNOB
E 08351	USE 1823 3000 STAY
E 08511	0 NUT AVAILABLE
E 09100	USE 1702 3002 START
E 09101	USE 1725 3001 ROTOR
E 09102	USE 1720 3001 STATR
E 09103	USE 1722 3001 BRUSH
E 09104	USE 1752 3001 POINT
E 09105	USE 1753 3001 COND
E 09111	USE 0671 3010 KEY
E 09121	USE 1720 3001 STATR
E 09122	USE 1751 3001 BASE
E 09123	USE 1723 3001 SPRNG
E 09124	USE 1754 3001 FELT
E 09126	USE 1755 3001 GRUM
E 09161	1 USE 1811 3003 FAN
E 09162	1 USE 1812 3002 CAP
E 09171	USE 1726 3001 BOLT
E 09200	USE 8703 3001 REGUL
E 09301	0 USE 8501 3000 COIL
E 09302	USE 8531 3000 WIRE
E 09303	USE 8521 3000 CAP
E 09305	USE 86 NGK PLUG
E 09400	2 USE 1760 3002 SWTCH
E 09402	USE 1785 3000 WIRE
E 09412	2 USE 1762 5000 PLATE
E 12101	USE 2110 3010 CASE
E 13101	1 USE 1301 3011 CRANK
E 13212	USE 1334 3001 BUSH
E 18232	BAND
E 18511	2 USE 2681 3010 ARM
E 18512	USE 2690 3010 PEDAL
E 18513	1 USE 2683 3011 RUBBR
E 18514	USE 2684 5000 WASH
E 18515	USE 0411 1022 WASH
E 19100	4 USE 1701 3014 MAG
E 19111	2 USE 1718 3013 FLYWL
E 19112	PLATE
E 19113	NUT FLYWHEEL
E 19114	USE 09041 108 WASH
E 19115	USE 1811 3010 FAN
E 19201	1 USE 1710 3011 PLATE
E 19203	0 USE 1752 5000 POINT
E 19211	0 USE 1712 3100 COIL
E 19221	USE 1714 3010 COIL
E 19241	USE 1753 3010 COND
E 19245	USE 1754 3020 FELT
E 19402	USE 1785 3010 WIRE
E 19403	1 USE 8702 3001 RECTR
E 21311	USE 1131 3020 ADAPT
E 28100	USE 1600 3005 CARB
E 28105	2 USE 1640 3012 LEVER
E 28107	USE 1660 3010 VALVE
E 28111	1 USE 1611 3021 BODY
E 28121	USE 1614 3021 VALVE
E 28122	1 USE 1615 3021 NEEDL
E 28123	1 USE 1616 3021 CLIP
E 28124	USE 1617 3021 SEAT
E 28125	USE 1618 3020 SPRNG
E 28126	USE 1619 3020 TOP
E 28127	USE 1622 3020 ADJTR
E 28128	USE 1623 3020 NUT
E 28131	1 USE 1627 3021 SCREW
E 28132	USE 1628 3010 SPRNG
E 28134	USE 1631 3010 SCREW
E 28135	USE 1632 3010 SCREW
E 28144	JET 90 NOT AVAILABL
E 28144	NUT AVAILABLE
E 28144	75 JET 75 NOT AVAILABL
E 28144	85 USE 1635 3010 85 JET
E 28144	0 USE 1635 3000 80 JET
E 28144	1 USE 1635 3010 65 JET
E 28145	USE 1633 3021 JET
E 28161	USE 1645 3010 PLUNG
E 28162	USE 1646 3010 SPRNG
E 28163	USE 1647 3010 CAP
E 28164	USE 1648 3010 CLIP
E 28181	USE 1666 3020 FLOAT
E 28182	USE 1667 3020 PIN
E 28183	1 USE 1656 3021 BODY
E 28184	USE 1657 3020 GASK

PART NUMBER	DESCRIPTION
E 28185	WASHER
E 28186	USE 1658 3010 SPRNG
E 28191	USE 1613 3020 SCREW
E 28241	USE 6241 3010 PIPE
E 28411	2 USE 2581 3012 PEDAL
E 28500	USE 2680 3100 ARM
E 28511	USE 2681 3010 ARM
E 28512	1 USE 2690 3010 PEDAL
E 38175	NEEDLE VALVE
E 38176	VALVE ROD
E 38177	NUT AVAILABLE
M 2498	USE 8141 3010 RIM
M 2499	USE 8102 3020 LAMP
M 2519	NUT AVAILABLE
M 2525	HD LIGHT ASSY CHP
M 3497	CLUTCH GRIP CHP
M 3511	USE 8205 3011 LIGHT
M 3512	USE 8205 5011 LIGHT
M 3513	USE 8251 3020 LENS
M 3514	USE 8240 5010 SOCKET
M 3524	USE 8240 5010 SOCKET
M 3526	USE 8102 3020 LAMP
M 4497	USE M3497 GRIP
M 4501	USE 8160 3010 SOCKET
M 4502	USE 8171-5000 BULB
M 4507	USE 8203 3010 REFLT
M 4515	USE 8252 3031 BULB
M 4516	USE 8252 3040 BULB
M 4517	USE 8253 3020 PACK
M 4518	USE 8256 3010 GRUM
M 4527	USE 8171 3030 BULB
M 4544	USE 3702 3020 REST
M 01100	2 USE 3110 3002 CUR
M 01100	2 USE 3110 3002 CBK
M 01100	2 USE 3110 3002 BLE
M 01811	USE 3315 3000 RACE
M 01812	1 USE 3311 3200 RACE
M 01813	1 USE 3312 3001 RACE
M 01814	USE 3314 3000 RACE
M 01815	USE 0611 0316 BALL
M 01816	USE 3321 3000 NUT
M 01817	USE 3323 3000 NUT
M 01818	1 USE 3322 3001 ADJTR
M 01819	WASHER
M 01821	1 USE 3372 3001 HANGR
M 01822	1 USE 3371 3001 HANGR
M 01823	1 USE 3368 3001 SPACE
M 01824	TANK COLLAR
M 01825	USE 3384 3000 HOLDR
M 01826	USE 4281 3000 CUR
M 01826	USE 4281 3000 CBK
M 01827	3 USE 3334 3003 CUR
M 01827	3 USE 3334 3003 CBK
M 01827	3 USE 3334 3003 BLE
M 01829	USE 3335 3000 STOP
M 01831	USE 3412 3000 GRUM
M 01832	USE 3367 3000 RUBBR
M 01833	1 USE 3353 3001 BAND
M 01836	3 USE 3414 3003 SHAFT
M 01837	4 USE 3415 3004 SHAFT
M 01838	1 USE 09525 101 NUT
M 01839	USE 09525 102 NUT
M 01841	1 USE 3354 3001 BAND
M 01844	USE 09541 101 WASH
M 01847	1 USE 09541 102 WASH
M 01848	USE 0411 1022 WASH
M 01849	1 USE 3423 3001 WASH
M 01851	BUSHING
M 01852	USE 3425 3000 GRUM
M 01854	USE 3411 3000 SPACR
M 01855	1 USE 3441 3001 CLAMP
M 01858	GROMMET
M 02201	USE 4230 3001 ARM
M 02201	1 USE 4230 3001 ARM
M 02202	1 USE 4220 3001 ARM
M 02231	1 USE 4241 3001 RING
M 02232	1 USE 4242 3001 RING
M 02233	1 USE 4243 3001 RING
M 02241	USE 4251 3000 BUSH
M 02242	USE 4253 3000 COLLR
M 02243	USE 4252 3000 COLLR
M 02244	3 USE 4254 3003 STOP
M 02245	0 USE 09064 102 GASKT
M 02246	USE 4255 3000 STOP

PART NUMBER	DESCRIPTION
M 02248	USE 4224 3000 NIPPL
M 02301 CBK	USE 4411 3000 CBK
M 02301 CUR	USE 4411 3000 CUR
M 02331	USE 4431 3000 CLIP
M 02332	USE 4286 3000 CAP
M 02406	NOT AVAILABLE
M 02409	STAY
M 02431	MOUNTING RUBBER
M 02432	WASHER
M 02433	WASHER
M 02434	BUMPER
M 02501 1	USE 8111 3004 CUR
M 02501 1	USE 8111 3004 CBK
M 02501 1	NOT AVAILABLE
M 02632	USE 8122 3006 ORNAM
M 02633	USE 8121 3010 ORNAM
M 03100 BLE	BLUE NOT AVAILABLE
M 03100 CUR	USE 4810 3003 CUR
M 03100 CBK	USE 4810 3003 CBK
M 03100 CHG	USE 4810 3003 CHG
M 03100 CFG	USE 4810 3003 CFG
M 03117	SWITCH BUTTON
M 03171 2	USE 4851 3002 BUSH
M 03172 2	USE 4853 3001 PACK
M 03174 1	USE 4852 3001 CAP
M 03181 2	USE 4861 3002 ADJTR
M 03200 BLE	USE 4901 3005 BLE
M 03200 CBK	USE 4901 3005 CBK
M 03200 CUR	USE 4901 3005 CUR
M 03200 CFG	USE 4901 3005 CFG
M 03200 CHG	USE 4901 3005 CHG
M 03211	USE 4901 3005 CUR
M 03212 0	RUBBER BUSH COLLA
M 03214	USE 4901 3005 BLK
M 03214 0	OUTER COVER GREEN
M 03214 0	USE 4901 3005 RED
M 03215 0	SPRING
M 03222 0	LOWER BRACKET
M 03227 0	RUBBER BUSH
M 03244 0	LOWER CASE CUMP
M 03300	USE 4701 3001 BLE
M 03300	USE 4701 3100 CHG
M 03300 1	USE 4701 3001 CUR
M 03300 1	USE 4701 3001 CBK
M 03301 CBK	USE 4711 3000 CBK
M 03301 CUR	USE 4711 3000 CUR
M 03301 CHG	USE 4711 3000 CHG
M 03304 BLE	NOT AVAILABLE
M 03304 CBK	USE 4721 3000 CBK
M 03304 CUR	USE 4721 3000 CUR
M 03304 CHG	USE 4721 3000 CHG
M 03361	USE 4731 3000 CAP
M 03362	USE 09511 126 BOLT
M 04100 3	USE 7102 3003 HUB
M 04101 3	USE 7111 3004 DRUM
M 04101 4	USE 7111 3004 DRUM
M 04103 4	USE 7131 3005 PANEL
M 04103 5	USE 7131 3005 PANEL
M 04104 3	USE 7105 3003 SHOE
M 04107	WASHER
M 04115 2	USE 7114 3002 COLLR
M 04116 1	USE 07 6201 03 BEAR
M 04117	USE 09590 102 SEAL
M 04118	USE 09590 101 SEAL
M 04118 3	USE 09590 101 SEAL
M 04119	USE 7115 3000 SPACR
M 04120	USE 7100 3000 WHEEL
M 04121	USE 7116 3000 GEAR
M 04122	USE 09590 102 SEAL
M 04124	USE 07 6201 03 BEAR
M 04125	USE 7118 3000 COLLR
M 04126	NOT AVAILABLE
M 04127	USE 7121 3000 SEAL
M 04133	BUSHING
M 04137 AI	USE 7134 3002 NIPPL
M 04138 AI	USE 7134 3002 NIPPL
M 04141 3	USE 7105 3003 SHOE
M 04145 1	USE 7145 3001 SPRNG
M 04147 1	USE 7151 3003 CAM
M 04147 3	USE 7151 3003 CAM
M 04148	USE 7152 3001 PACK
M 04149	USE 0111 0630 BOLT
M 04151 4	USE 7153 3004 LEVER
M 04155 1	NUT USED

PART NUMBER	DESCRIPTION
M 04156	SPACER
M 04157	SPACER
M 04159	NUT USED
M 04171	NUT USED
M 04172 2	NOT AVAILABLE
M 04173 2	USE 7221 3002 AXLE
M 04176	USE 0232 1200 NUT
M 04177	USE 09524 101 NUT
M 04178	USE 0232 1200 NUT
M 04181	USE 7441 3000 RIM
M 04182	USE 7108 3000 EA
M 04182 2	USE 7108 3000 SPKE
M 04190	NOT USED
M 04191	USE 225 X 17 FS TIR
M 04192	USE 225 X 17 TUBE
M 04193	USE 7253 3000 BAND
M 04199	USE 7101 3000 WHEEL
M 04200 3	USE 7302 3003 HUB
M 04201 2	USE 7311 3002 DRUM
M 04203 2	USE 7331 3002 PANEL
M 04210	OIL SEAL
M 04215 1	USE 7314 3001 COLLR
M 04217 1	USE 09590 103 SEAL
M 04219	USE 0411 0613 WASH
M 04220	USE 7402 3000 WHEEL
M 04247 3	USE 7351 3003 CAM
M 04248 1	USE 7152 3001 LEVER
M 04249 2	USE 0111 0630 BOLT
M 04251 4	USE 7353 3004 LEVER
M 04252 3	USE 7361 3003 PIN
M 04254	USE 7366 3000 LINK
M 04259 1	USE 7367 3001 BOLT
M 04261	USE 7381 3000 SPRKT
M 04262	USE 09511 105 BOLT
M 04271 1	USE 7427 3001 COLLR
M 04272 1	USE 7426 3001 COLLR
M 04273 2	USE 290 34501 200
M 04281	USE 7441 3000 RIM
M 04282	USE 7308 3000 EA
M 04282 2	USE 7308 3000 SPUKE
M 04291	USE 225 X 17 SS TIR
M 04299	USE 7402 3000 WHEEL
M 04301 5	USE 3810 3005 XCI
M 04305	USE 7501 3000 CHAIN
M 04313	NOT AVAILABLE
M 04321 1	USE 3821 3001 SPRNG
M 04331 1	USE 3831 3001 ROD
M 04332 0	USE 3832 3000 NUT
M 04333	USE 3833 3000 SPRNG
M 04357	USE 7520 3000 LINK
M 04464	USE 8121 3020 ORNAM
M 05100	THROTTLE GRIP
M 05102	GRIP PIPE
M 05103	COVER
M 05106 1	USE 6176 3001 CABLE
M 05108	USE 6181 3000 CABLE
M 05111	HOLDER
M 05112	LEVER
M 05113	CABLE ADJUSTER
M 05114	NUT
M 05115	USE 6124 3100 COLLR
M 05116	WIRE
M 05117	SWITCH BUTTON
M 05118	SPRING
M 05119	WIRE HOLDER
M 05121	PIPE
M 05122	GRIP RUBBER
M 05123	WIRE END
M 05137	BUTTON
M 05141	SCREW
M 05200	CLUTCH GRIP
M 05203	COVER
M 05206 1	USE 6186 3001 CABLE
M 05207 1	USE 9421 3001 CABLE
M 05208	USE 9422 3001 CABLE
M 05211	HOLDER
M 05212	LEVER L H
M 05217	CONTACT
M 05218	SPRING
M 05222	GRIP RUBBER
M 05234	CLAMP
M 05267	NOT AVAILABLE
M 05291 1	USE 9423 3000 LINK
M 05292	USE 9424 3000 HOOK

PART NUMBER	DESCRIPTION
M 05293	USE 9425 3000 CLIP
M 05300 0	USE 8401 3004 METER
M 05304 3	USE 7261 3003 GEAR
M 05307	USE 6171 3001 CABLE
M 05312	USE 8421 3002 SOCKET
M 05313	USE 8422 3002 SOCKET
M 05314	USE 8423 3002 SOCKET
M 05315 0	USE 8424 3000 BULB
M 05318	USE 8427 3000 GASKT
M 05357	PACKING
M 05371	USE 9412 3000 TUBE
M 05372	USE 9411 3000 CABLE
M 06100 2	USE 8102 3004 LAMP
M 06102 2	USE 8160 3004 SOCKET
M 06111 1	USE 8141 3002 RIM
M 06112 1	USE 8150 3002 LENS
M 06113 1	USE 8177 3010 SCREW
M 06114 1	USE 8173 3001 NUT
M 06115	USE 8176 3000 SCREW
M 06116	USE 8174 3000 SPRNG
M 06117 0	USE 8175 3010 NUT
M 06118	USE 8154 3000 CLAMP
M 06121 0	USE 8171 8010 BULB
M 06122	NOT AVAILABLE
M 06123	NOT AVAILABLE
M 06126	NOT AVAILABLE
M 06200	USE 8201 3010 CBK
M 06211 1	USE 8211 3001 BODY
M 06213	USE 8240 3010 LIGHT
M 06215 1	USE 8259 3001 SPACR
M 06216 1	USE 8251 3001 LENS
M 06217	USE 8252 3000 BULB
M 06231	USE 8362 3000 BASE
M 06232	USE 8371 3000 LENS
M 06233 1	USE 8332 3000 BULB
M 06241	USE 8352 3000 BASE
M 06301	SIGNAL LIGHT
M 06302	SIGNAL LIGHT
M 06305 2	USE 8305 3002 UNIT
M 06311	BASE
M 06312	PACKING
M 06313	LENS
M 06321	BASE
M 06400 2	USE 8601 3002 SWTCH
M 06411 11	USE 8621 3002 11
M 06411 12	USE 8621 3002 12
M 06411 13	USE 8621 3002 13
M 06411 14	USE 8621 3002 14
M 06411 77	USE 8621 3002 77
M 06411 78	USE 8621 3002 78
M 06411 79	USE 8621 3002 79
M 06411 80	USE 8621 3002 80
M 06412	USE 8621 3002 11
M 06500	USE 8402 3000 HORN
M 06600 A1	USE 8701 3002 BATTY
M 06701	USE 8810 3000 WIRE
M 06731	USE 8822 3000 WIRE
M 06732	USE 8831 3000 WIRE
M 06733	USE 8535 3000 WIRE
M 06736	WIRE
M 06738 1	USE 8829 3001 TUBE
M 06800	USE 8802 3021 FUSE
M 06800 2	USE 8802 3030 FUSE
M 06811 1	USE 8861 3020 FUSE
M 07100 CBK	USE 5101 3001 CUR
M 07100 CBN	USE 5101 3001 CBN
M 07100 CUR	USE 5101 3001 CUR
M 07101 1	USE 5101 3001 CUR
M 07105 2	USE 5160 3002 CAP
M 07106	USE 5103 3000 COCK
M 07134	USE 5148 3000 WASH
M 07135	USE 5149 3000 GRUM
M 07137	USE 5142 3000 GRIP
M 07138	USE 5141 3000 GRIP
M 07139	USE 5143 3000 MARK
M 07152 1	USE 5171 3001 GASKT
M 07158	NUT USED
M 07161	USE 5181 3000 BODY
M 07162 0	USE 5182 5000 BOWL
M 07163	USE 5183 3000 PACK
M 07166	USE 5184 3000 PACK
M 07182 1	USE 5172 3001 PIPE
M 07183	USE 5187 3004 CLIP
M 07184	SPRING

PART NUMBER	DESCRIPTION
M 08100	USE 6460 3012 SEAT
M 08153	NOT AVAILABLE
M 08154	NOT USED
M 08155	NOT USED
M 08201	NOT AVAILABLE
M 08202	USE 6460 3012 SEAT
M 08300 1	GN USE 3610 3100 CHG
M 08300 1	GY USE 3610 3100 CFG
M 08300 CBK	USE 3610 3001 CBK
M 08300 CUR	USE 3610 3001 CUR
M 08304	USE E08304 BAND
M 08319 2	USE 3621 3002 SHAFT
M 08331	USE 3624 3000 SPRNG
M 08332	USE 09541 103 WASH
M 08400 CBK	NOT AVAILABLE
M 08400 CUR	NOT AVAILABLE
M 08401 CBK	USE 3710 3001 CBK
M 08401 CUR	USE 3710 3001 CUR
M 08421 2	USE 3721 3002 RUBBR
M 08422 1	USE 3725 3001 STOP
M 08501 2	USE 6301 3002 MUFFL
M 08515	TAIL PIPE
M 08516	USE 6320 3000 PIPE
M 08531 1	USE 6351 3001 PIPE
M 08532	USE 6361 3000 CLAMP
M 08533 1	USE 6362 3002 JOINT
M 08533 2	USE 6362 3002 JOINT
M 08534 1	USE 6363 3001 STOP
M 08535	USE 6364 3000 RING
M 08601 CBK	USE 6802 3001 CFG
M 08601 CFG	USE 6802 3001 CFG
M 08602 CBK	USE 6801 3001 CFG
M 08611	USE 6802 3001 CFG
M 08621	USE 6801 3001 CFG
M 08631 2	USE 6831 3002 CBK
M 08633	USE 09504 101 RING
M 08700	USE 9201 3000 TOOL
M 08711 1	NOT AVAILABLE
M 08712	USE 823 20000 200SPR
M 08713 0	USE 9231 3000 GRIP
M 08714 1	USE 9212 3001 SPANR
M 08715	USE 9216 3000 SPANR
M 08716 0	NOT AVAILABLE
M 08717 0	USE 9228 5000 DRIVR
M 09100 2	USE 6460 3012 SEAT
M 09602	USE 8650 5000 SWTCH
M 09622	CLAMP
M 09623	CLAMP
M 09624	SEAT
M 09625	USE 8661 3001 SPRNG
M 09801	USE 8240 3010 BASE
M 09900	USE 9300 3010 TOOLS
M 09901	USE 9301 3010 PULLR
M 09922 0	PISTON SEAT
M 09923 0	RUBBER RING RELEA
M 09924 0	ROTOR PULLER
M 09925 0	CLUTCH DISC TOOL
M 09926 0	TOOL BAG
M 09927 0	FAN PULLER
M 09929	USE 9328 3001 TOOL
M 09931 0	NEEDLE JET PULLER
M 09932 0	BEARING REMOVER
M 09936 0	ARBOR OIL SEAL
M 11853 1	USE 3433 3011 LOCK
M 11854 2	USE 3434 3012 611
M 11854 2	USE 3434 3012 612
M 11854 2	USE 3434 3012 613
M 11854 2	USE 3434 3012 614
M 15200	USE 6101 3010 GRIP
M 16200 BLE	NOT AVAILABLE
M 16200 CBK	USE 8201 3010 CBK
M 16200 CUR	USE 8201 3010 CUR
M 16800 1	USE 8802 3021 FUSE
M 16811	USE 8861 3030 FUSE
M 18107	USE EA1 91150 SEAT
M 18174	PLATE
M 18175	NUT
M 18176	SET BAND
M 19140 1	USE 3702 3020 FOOT
M 19401	USE 3702 3020 FOOT
M 19402	USE 3702 3020 FOOT
M 21100	FRAME RED
M 21106	NOT AVAILABLE
M 21121	CLAMP

PART NUMBER	DESCRIPTION
M 21122	BRACKET
M 21125	USE 3424 3010 STRAP
M 21131	SPACER
M 21181	STIFFENER
M 21189	TUBE
M 21191	TUBE
M 21802	HANGER
M 21833	1 USE 3353 3011 BAND
M 21861	STOPPER
M 21865	HANGER R
M 21867	HANGER L
M 21871	LINER
M 21872	RUBBER MOUNT
M 21881	HANGER UPPER
M 21882	HANGER LOWER
M 21883	LINER
M 21885	HANGER R
M 21886	HANGER L
M 21891	TOOL BOX
M 21895	NOT AVAILABLE
M 21913	BUSHING
M 21914	USE 3382 3010 BUSH
M 21915	BUSHING
M 21916	COLLAR
M 21917	USE 3387 3010 COLLR
M 22501	2 USE 8111 3012 CUR
M 22501	2 USE 8111 3012 CBK
M 23172	1 USE 4853 3011 PROTR
M 25100	GRIP
M 25111	LEVER HOLDER
M 25300	USE 8401 3030 METER
M 25314	USE 8421 3002 SOCKET
M 25315	USE 8424 3010 BULB
M 25318	USE 8427 3000 GASKT
M 26100	2 USE 8102 3012 LAMP
M 26121	USE 8171 3010 BULB
M 26203	LIGHT R
M 26204	LIGHT L
M 26217	USE 8252 3020 BULB
M 26232	USE 8371 3011 LENS
M 26233	1 USE 8332 3010 BULB
M 26235	NOT AVAILABLE
M 26241	WINKER BASE
M 26245	NOT AVAILABLE
M 26301	SIGNAL LIGHT R
M 26302	SIGNAL LIGHT L
M 26305	2 USE 8305 3012 UNIT
M 26314	USE 8332 3020 BULB
M 26400	3 USE 8601 3013 SWTCH
M 26411	67 USE 8621 3011 67
M 26411	68 USE 8621 3011 68
M 26411	69 USE 8621 3011 69
M 26411	70 USE 8621 3011 70
M 26500	1 USE 8402 5600 HORN
M 26600	USE 8701 3040 BATTY
M 26700	USE 8810 3011 WIRE
M 26800	1 USE 8802 3011 FUSE
M 26811	USE 8861 3010 FUSE
M 28601	USE 6802 3001 CFG
M 28602	CBK USE 6801 3012 CBK
M 28602	CFG USE 6801 3030 CFG
M 28621	USE 6801 3012 CBK
M 29904	1 MAGNETO PULLER
M 40217	USE 8252 3020 BULB
M 41826	USE 4281 3010 BRCKT
M 42100	USE 4100 3010 CUR
M 42100	CFG USE 4100 3010 CFG
M 42100	CUR USE 4100 3010 CUR
M 42401	1 USE 4511 3010 BAR
M 42422	1 USE 4283 3012 HOLDR
M 42423	1 USE 4282 3012 BASE
M 42435	USE 09511 106 BOLT
M 42513	1 USE 8124 3011 PROTR
M 45200	1 USE 6101 3021 GRIP
M 45211	1 USE 6111 3011 HOLDR
M 45212	1 USE 6122 3011 LEVER
M 46217	USE 8252 3020 BULB
M 46600	USE 8701 3040 BATTY
M 46800	USE 8802 3030 FUSE
M 46811	USE 8861 3020 FUSE
M 49625	1 USE 8661 3001 SPRNG
M 51100	USE 3110 3040 CUR
M 52000	USE 4100 3010 CUR
M 52000	USE 4100 3010 BLE

PART NUMBER	DESCRIPTION
M 52000	USE 4100 3010 CFG
M 52000	CBK USE 4100 3010 CUR
M 52000	CHG USE 4100 3010 CHG
M 66200	CBK USE 8201 3040 CBK
M 66200	CUR USE 8201 3040 CUR
EAL 10000	ENG 90 USE SC1326
EAL 11111	USE 1111 5000 HEAD
EAL 11112	USE 1115 5000 NUT
EAL 11211	USE 1121 5030 CYLND
EAL 11212	USE 1126 5000 STUD
EAL 11411	USE 1141 5000 GASKT
EAL 11412	USE 1142 5000 GASKT
EAL 11413	USE 1143 5000 PACK
EAL 13100	USE 1301 5010 CRANK
EAL 13111	NUT USED
EAL 13121	NUT AVAILABLE
EAL 13151	USE 1321 5000 PIN
EAL 13152	USE 1326 5000 RETNR
EAL 13153	NOT AVAILABLE
EAL 13210	USE 1331 5010 ROD
EAL 13212	USE 1334 5000 BUSH
EAL 13221	USE 09021 103 NUT
EAL 13310	STD USE 1341 5000 STD
EAL 13310	25 USE 1342 5000 25
EAL 13310	50 USE 1343 5000 50
EAL 13320	STD USE 1305 5000 STD
EAL 13320	25 USE 1306 5000 25
EAL 13320	50 USE 1307 5000 50
EAL 13331	USE 1381 5000 PIN
EAL 13332	USE 1382 5000 CLIP
EAL 13411	USE 09049 106 SAIM
EAL 13413	USE 09062 103 DWEL
EAL 13421	USE 1385 5000 GEAR
EAL 13422	USE 09046 101 WASH
EAL 13423	USE 09029 103 NUT
EAL 14110	USE 1412 5010 VALVE
EAL 14121	USE 1451 5000 COLLR
EAL 14122	USE 09066 102 RING
EAL 14131	USE 1431 5000 COVER
EAL 14132	USE 09066 103 RING
EAL 14133	USE 09066 104 RING
EAL 14141	USE 09090 108 SEAL
EAL 16100	USE 1600 5000 CARB
EAL 16111	USE 1611 5000 BODY
EAL 16121	USE 1614 5000 VALVE
EAL 16122	USE 1615 3021 JET
EAL 16123	USE 1616 3021 CLIP
EAL 16124	USE 1617 3021 SEAT
EAL 16125	USE 1618 5000 SPRNG
EAL 16126	USE 1619 5000 TOP
EAL 16127	USE 1621 5000 CAP
EAL 16128	USE 1622 5000 ADJTR
EAL 16129	USE 1623 5000 NUT
EAL 16131	USE 1626 5000 ROD
EAL 16132	USE 1627 5000 STOP
EAL 16133	USE 1628 5000 SPRNG
EAL 16135	USE 1631 5000 SCREW
EAL 16136	USE 1632 3010 SCREW
EAL 16141	100 USE 1635 5000 100
EAL 16141	110 USE 1635 5000 110
EAL 16142	USE 1633 3100 JET
EAL 16143	USE 1634 3110 JET
EAL 16151	USE 1651 5000 BOLT
EAL 16152	USE 1652 5010 CONN
EAL 16153	USE 1654 3100 GASKT
EAL 16161	USE 1645 5000 PLUNG
EAL 16162	USE 1646 5000 SPRNG
EAL 16163	USE 1647 5000 CAP
EAL 16170	USE 1660 5010 VALVE
EAL 16173	USE 1665 3100 GASKT
EAL 16183	USE 1656 5000 BODY
EAL 16184	USE 1657 3100 PACK
EAL 16191	USE 1613 3020 SCREW
EAL 17100	USE 1701 5000 MAG
EAL 17111	USE 1718 5000 FLYWL
EAL 17210	USE 1710 5000 FRAME
EAL 17212	USE 1713 5000 COIL
EAL 17213	USE 1714 5000 COIL
EAL 17230	USE 1752 5000 POINT
EAL 17241	USE 1753 5000 COND
EAL 17251	USE 1755 5000 GROM
EAL 17252	USE 1764 5000 GROM
EAL 17311	USE 1761 5000 CASE
EAL 17312	USE 1762 5000 PLATE

PART NUMBER	DESCRIPTION	PART NUMBER	DESCRIPTION
EAL 17313	USE 1763 5000 PACK	EAL 24212	USE 2522 5000 PIN
EAL 17410	USE 87HS NGK PLUG	EAL 24213	USE 2523 5000 STOP
EAL 21110	USE 2110 5010 CASE	EAL 24214	USE 2524 5000 HOLDR
EAL 21121	USE 07 6304 03 BEAR	EAL 24215	USE 2541 5001 FORK
EAL 21122	USE 07 6201 03 BEAR	EAL 24216	USE 2544 5000 PIN
EAL 21124	USE 09090 106 SEAL	EAL 24221	USE 2549 5000 PLATE
EAL 21127	USE 2121 5000 STUD	EAL 24221	USE 2549 5001 PLATE
EAL 21210	USE 2130 5001 CASE	EAL 24222	USE 0441 0611 WASH
EAL 21210	USE 2130 5001 CASE	EAL 24230	USE 2531 5001 STOP
EAL 21213	USE 2133 5000 BUSH	EAL 24231	USE 2531 5001 STOP
EAL 21222	USE 07 6006 01 BEAR	EAL 24232	USE 2536 5000 BOLT
EAL 21224	USE 2145 5000 HOLDR	EAL 24233	USE 2538 5000 SPRNG
EAL 21310	USE 2160 5000 CASE	EAL 24234	USE 2537 5000 COLLR
EAL 21321	USE 2162 5002 PIPE	EAL 24235	USE 2538 5000 SPRNG
EAL 21321	USE 2162 5002 PIPE	EAL 24236	USE 2536 5000 BOLT
EAL 21322	USE 2162 5002 PIPE	EAL 24237	USE 2537 5000 COLLR
EAL 21322	USE 2162 5002 PIPE	EAL 24311	USE 2581 5000 PEDAL
EAL 21332	USE 2165 5000 COCK	EAL 24312	USE 2582 5000 RUBBR
EAL 21333	USE 09066 105 RING	EAL 25111	USE 2621 5002 SHAFT
EAL 21334	USE 09058 102 PLUG	EAL 25111	USE 2621 5002 SHAFT
EAL 21335	USE 09065 102 GASKT	EAL 25112	USE 2631 5000 GEAR
EAL 21337	USE 2168 5000 PLUG	EAL 25113	USE 2632 5000 ARM
EAL 21351	USE 2176 5000 COVER	EAL 25114	USE 2633 5000 RATCH
EAL 21352	USE 2179 5000 CAP	EAL 25115	USE 2634 5000 SPRNG
EAL 21353	USE 2177 5000 CAP	EAL 25120	USE 2635 5000 STOP
EAL 21355	USE 2178 5000 RING	EAL 25131	USE 2636 5001 SPRNG
EAL 21411	USE 2151 5020 COVER	EAL 25132	USE 2638 3200 SPACR
EAL 21412	USE 2152 5001 COVER	EAL 25200	USE 2680 5000 PEDAL
EAL 21422	USE 2156 5000 RUBBR	EAL 25214	USE 2684 5000 WASH
EAL 21431	USE 2153 5001 COVER	EAL 31100	USE 3110 5011 CBK
EAL 21511	USE 2181 5000 PACK	EAL 31100	USE 3110 5011 OMB
EAL 21512	USE 2183 5000 PACK	EAL 31320	USE 3331 5000 TUBE
EAL 21513	USE 2185 5000 PACK	EAL 31410	USE 3318 5000 CAGE
EAL 21514	USE 2184 5000 PACK	EAL 31411	USE 3313 5000 RACE
EAL 21515	USE 2186 5000 GASKT	EAL 31412	USE 3311 5000 RACE
EAL 22111	USE 2221 5000 BRCKT	EAL 31414	USE 3321 5000 NUT
EAL 22112	USE 2210 5000 PLATE	EAL 31415	USE 3322 5000 NUT
EAL 22115	USE 2227 5000 PLATE	EAL 31416	USE 3319 5000 CAP
EAL 22118	USE 2218 5000 SPRNG	EAL 31417	USE 3334 5000 BRCKT
EAL 22119	USE 2216 5000 PLATE	EAL 31419	NOT AVAILABLE
EAL 22120	USE 2215 5000 PLATE	EAL 31421	USE 3414 5000 BOLT
EAL 22121	USE 2214 5000 DISC	EAL 31422	USE 3415 5000 BOLT
EAL 22221	USE 2260 5000 ARM	EAL 31423	USE 3416 5000 RUBBR
EAL 22225	USE 2264 5000 SCREW	EAL 31424	USE 3417 5000 RUBBR
EAL 22226	USE 2265 5000 SCREW	EAL 31425	USE 3419 5000 BOLT
EAL 22227	USE 2267 8000 SCREW	EAL 31426	USE 3422 5000 MS
EAL 22228	USE 2268 5000 WASH	EAL 31427	USE 3422 5000 MS
EAL 22229	USE 2271 5000 SPRNG	EAL 31428	USE 09525 105 NUT
EAL 22230	USE 09090 102 SEAL	EAL 31429	USE 3418 5000 BRCKT
EAL 22231	USE 09056 105 PIN	EAL 31432	USE 0411 1022 WASH
EAL 22232	USE 2272 5000 WASH	EAL 31440	USE 3354 5001 BAND
EAL 22240	USE 6186 5000 CABLE	EAL 31450	USE 3433 5000 LOCK
EAL 23110	USE 2410 5001 GEAR	EAL 31459	USE 3435 5010 911
EAL 23211	USE 2421 5000 SHAFT	EAL 31459	USE 3435 5010 912
EAL 23211	USE 2421 5001 SHAFT	EAL 31459	USE 3435 5010 913
EAL 23212	USE 2426 5000 GEAR	EAL 31459	USE 3435 5010 914
EAL 23213	USE 2431 5000 GEAR	EAL 31459	USE 3435 5010 915
EAL 23214	USE 2436 5000 GEAR	EAL 31459	USE 3435 5010 949
EAL 23215	USE 09002 103 CLIP	EAL 31459	USE 3435 5010 950
EAL 23216	USE 2478 5000 BUSH	EAL 31459	USE 3435 5010 951
EAL 23217	USE 09048 101 WASH	EAL 31459	USE 3435 5010 952
EAL 23220	USE 2610 5000 GEAR	EAL 31459	USE 3435 5010 953
EAL 23231	USE 09021 102 NUT	EAL 31459	USE 3435 5010 954
EAL 23232	USE 09047 103 WASH	EAL 41000	USE 4100 5000 CBK
EAL 23236	USE 2536 5000 BOLT	EAL 41000	USE 4100 5000 OMB
EAL 23311	USE 2446 5000 SHAFT	EAL 41110	USE 4111 5001 MS
EAL 23311	USE 2446 5001 SHAFT	EAL 41120	USE 4113 5001 TUBE
EAL 23312	USE 2451 5000 GEAR	EAL 41125	NOT AVAILABLE
EAL 23313	USE 2456 5000 GEAR	EAL 41131	USE 4114 5000 NUT
EAL 23314	USE 2461 5000 GEAR	EAL 41132	USE 09566 102 RING
EAL 23315	USE 2466 5000 GEAR	EAL 41133	USE 09590 108 SEAL
EAL 23316	USE 2616 5000 GEAR	EAL 41134	USE 4115 5000 SEAT
EAL 23317	USE 09048 102 WASH	EAL 41141	USE 4116 5000 BUCH
EAL 23318	USE 2481 5000 COLLR	EAL 41161	USE 09531 101 PLUG
EAL 23321	USE 2483 5000 COLLR	EAL 41162	USE 4118 5000 PACK
EAL 23322	USE 2484 5000 SPRKT	EAL 41171	USE 4121 5000 SPRNG
EAL 24110	USE 2510 5000 SHAFT	EAL 41172	USE 4122 5000 GUIDE
EAL 24110	USE 2510 5002 SHAFT	EAL 41181	USE 4123 5000 PACK
EAL 24115	USE 2517 5000 SPRNG	EAL 41182	USE 4124 8000 BOLT
EAL 24117	USE 2551 5000 SPRNG	EAL 41183	USE 0411 1022 WASH
EAL 24118	USE 2553 5000 PIN	EAL 41210	USE 4131 5001 MS
EAL 24210	USE 2502 5000 DRUM	EAL 41251	USE 09511 116 BOLT
EAL 24210	USE 2502 5001 DRUM	EAL 41310	USE 4151 5000 CBK
EAL 24211	USE 2502 5000 DRUM	EAL 41321	USE 09511 137 BOLT

PART NUMBER	DESCRIPTION
EA1 41410	OB USE 4171 5000 CBK
EA1 41410	OMB USE 4171 5000 OMB
EA1 41420	OB USE 4181 5000 CBK
EA1 41420	OMB USE 4181 5000 OMB
EA1 41432	USE 0411 1022 WASH
EA1 41511	USE 4161 5000 BRCKT
EA1 41521	USE 4162 5000 HOLDR
EA1 41541	USE 0133 0836 BOLT
EA1 41551	USE 4164 5000 NUT
EA1 41552	USE 4165 5000 WASH
EA1 42120	CBK USE 4421 5000 CBK
EA1 42130	CBK USE 4422 5000 CBK
EA1 42221	USE 4432 5000 PROTR
EA1 43111	USE 4511 5000 BAR
EA1 45100	USE 4701 5000 MS
EA1 47100	CBK USE 4810 5000 CBK
EA1 47100	MB USE 4810 5000 MB
EA1 47211	USE 4851 5000 RUBBR
EA1 47212	USE 4854 5000 SPRNG
EA1 47213	USE 4852 5000 CAP
EA1 48100	CBK USE 4901 5000 CBK
EA1 48100	MB USE 4901 5000 MB
EA1 51110	CBK USE 5110 5001 CBK
EA1 51110	OMB USE 5110 5001 MB
EA1 51211	USE 5141 5000 GRIP
EA1 51212	USE 5142 5000 GRIP
EA1 51213	USE 5143 5000 MARK
EA1 52113	USE 5182 5000 BOWL
EA1 52121	USE 5186 5000 TUBE
EA1 52122	USE 5172 5000 PIPE
EA1 61100	USE 6101 5000 GRIP
EA1 61111	USE 6111 5000 HOLDR
EA1 61120	USE 6115 5000 WIRE
EA1 61141	USE 6121 5000 COVER
EA1 61143	USE 6119 5000 KNOB
EA1 61170	USE 6103 5000 LEVER
EA1 61200	USE 6104 5020 GRIP
EA1 61220	NUT USED
EA1 61241	USE 6151 5020 COVER
EA1 61244	USE 6147 3100 CLAMP
EA1 61300	USE 8401 5011 METER
EA1 61321	1 USE 8833 5001 WIRE
EA1 61510	USE 6171 5000 CABLE
EA1 61512	USE 9411 5000 CABLE
EA1 61520	USE 6176 5000 CABLE
EA1 61530	USE 6178 5000 CABLE
EA1 61541	USE 6181 5000 CABLE
EA1 61542	USE 6182 5000 SPRNG
EA1 61543	USE 6183 5000 BOOT
EA1 61551	CABLE GUIDE
EA1 61561	USE 6189 5000 CLAMP
EA1 61562	USE 6189 5000 CLAMP
EA1 61610	USE 3810 5030 PEDAL
EA1 61621	USE 3821 5000 SPRNG
EA1 62110	1 USE 6211 5001 CLEAN
EA1 62121	USE 6241 5000 PIPE
EA1 62122	USE 6242 5000 JOINT
EA1 62123	USE 6243 5000 RING
EA1 63111	USE 6351 5030 PIPE
EA1 63121	USE 6362 5000 JOINT
EA1 63122	USE 6364 5000 RING
EA1 63123	USE 6361 5000 NUT
EA1 63124	USE 6363 5000 STOP
EA1 63125	DISCONTINUED
EA1 63300	USE 6301 5000 MUFFR
EA1 63313	USE 6320 5000 PIPE
EA1 64100	USE 6410 5020 SEAT
EA1 65100	OMB USE 6510 5000 RACK
EA1 66410	USE 3610 5000 CBK
EA1 66421	USE 3621 3200 TUBE
EA1 66422	USE 3622 5000 GUIDE
EA1 66423	USE 3623 5000 PIN
EA1 66424	USE 3624 5000 SPRNG
EA1 67110	USE 3710 5000 CBK
EA1 67210	USE 3650 5000 STAND
EA1 67211	USE 3662 5000 BOLT
EA1 67212	USE 3663 5000 SPRNG
EA1 67300	USE 3702 5000 REST
EA1 67322	USE 3762 5000 WASH
EA1 67323	USE 3763 5000 PIN
EA1 68111	OB USE 6811 5030 CBK
EA1 68111	OMB 90M USE 6811 50300M
EA1 68111	OMB 90T USE 6811 50300M
EA1 68111	OUR USE 6811 5030 OUR

PART NUMBER	DESCRIPTION
EA1 68112	USE 6831 5000 KNOB
EA1 68121	OB USE 6821 3210 CBK
EA1 68121	OMB USE 6821 3220 OMB
EA1 68121	OUR USE 6821 3200 OMB
EA1 69100	USE 9201 5000 TOOLS
EA1 69111	USE 9211 5000 BAG
EA1 69112	USE 9225 5000 PLIER
EA1 69113	USE 9218 5000 BOX
EA1 69114	USE 9217 5000 BOX
EA1 69115	USE 9215 5000 BOX
EA1 69116	USE 9213 5000 DRIVR
EA1 69117	USE 9226 5000 DRIVR
EA1 71020	USE 7101 5000 WHEEL
EA1 71110	1 USE 7111 5002 DRUM
EA1 71110	2 USE 7111 5002 DRUM
EA1 71114	USE 7114 5000 PIPE
EA1 71116	USE 07 6201 03 BEAR
EA1 71118	SNAP RING
EA1 71130	1 USE 7130 5002 PANEL
EA1 71130	3 USE 7130 5003 PANEL
EA1 71141	USE 7148 5001 GEAR
EA1 71142	USE 7149 3110 CONN
EA1 71150	USE 7140 5000 SHOE
EA1 71161	USE 7145 3110 SPRNG
EA1 71181	USE 7221 5000 SHAFT
EA1 71191	USE 7166 5000 BAR
EA1 71192	USE 7167 5000 BOLT
EA1 71200	USE 7241 5000 RIM
EA1 71300	USE 7108 5000 SPOKE
EA1 71300	USE 7108 5000 EA
EA1 71410	USE 250 X 17 FS TIR
EA1 71420	USE 250 X 17 TUBE
EA1 71999	USE 7101 5000 WHEEL
EA1 72020	USE 7301 5000 WHEEL
EA1 72110	0 USE 7311 5001 DRUM
EA1 72110	1 USE 7311 5001 DRUM
EA1 72114	USE 7314 5000 PIPE
EA1 72141	USE 7376 5001 FLANG
EA1 72142	USE 7377 5000 COLLR
EA1 72151	USE 7381 5000 SPRKT
EA1 72155	USE 0431 0820 WASH
EA1 72160	USE 7331 5001 PANEL
EA1 72160	2 USE 7331 5001 PANEL
EA1 72181	USE 7421 3110 SHAFT
EA1 72191	USE 7366 5000 BAR
EA1 72300	USE 7308 5000 SPOKE
EA1 72300	USE 7308 5000 EA
EA1 72350	USE 7308 5000 SPOKE
EA1 72410	USE 250 X 17 RS TIR
EA1 72420	USE 250 X 17 TUBE
EA1 72999	USE 7301 5000 WHEEL
EA1 73000	USE 7501 5000 CHAIN
EA1 73150	USE 7520 5000 LINK
EA1 73200	USE 7520 5000 LINK
EA1 81110	OB USE 8111 5000 CBK
EA1 81110	OMB USE 8111 5020 MB
EA1 81110	OUR USE 8111 5020 OUR
EA1 81112	USE 8125 5020 GRDM
EA1 81113	USE 8126 5000 NUT
EA1 81200	USE 8102 5000 LIGHT
EA1 81210	USE 8140 5000 RIM
EA1 81220	USE 8150 5000 LENS
EA1 81230	USE 8160 5000 SOCKT
EA1 81241	USE 8172 5000 STOP
EA1 81242	USE 8171 5000 BULB
EA1 81311	USE 8834 5000 WIRE
EA1 85110	USE 8402 5600 HORN
EA1 86100	USE 8601 5000 SWTCH
EA1 87110	USE 8701 5010 BATTY
EA1 88110	USE 8810 5010 WIRE
EA1 88300	USE 8802 5000 FUSE
EA1 89100	USE 8650 5000 SWTCH
EA1 89110	USE 8650 5000 SWTCH
EA1 89121	0 USE 8661 3001 SPRNG
EA1 89121	1 USE 8661 5001 SPRNG
EA1 89310	USE 8501 5001 COIL
EA1 89320	USE 8520 5000 CAP
EA1 89510	USE 8702 5000 RECTR
EA1 91100	USE 6460 5030 SEAT
EA1 91150	REAR SEAT BS90M
EA1 91200	USE 6531 3220 RACK
EA1 91550	USE EAL 91150 SEAT
EA1 91720	USE 4421 5010 STAY
EA1 91730	USE 4422 5010 STAY

PART NUMBER	DESCRIPTION	PART NUMBER	DESCRIPTION
EA1 91741	USE 4435 5010 PLUG	EA2 16183	USE 1656 5010 BODY
EA1 91751	USE 4451 5010 FLAP	EA2 16184	USE 1657 5010 GASKT
EA1 91752	USE 4452 5010 BAND	EA2 16191	USE 1613 5010 SCREW
EA1 91800	USE 4751 5010 CASE	EA2 21351	USE 2176 5010 COVER
EA1 99100	USE 9300 5010 TOOLS	EA2 21353	USE 2177 5010 CAP
EA1 99111	35 MM WRENCH	EA2 21355	USE 2178 5010 RING
EA1 99112	FRONT FORK TOOL	EA2 22118	USE 2218 5010 SPRNG
EA1 99113	NUT AVAILABLE	EA2 31100	CBK USE 3110 5031 CBK
EA1 99114	PISTON SEAT	EA2 31110	OB USE 3110 5031 CBK
EA1 99115	NUT AVAILABLE	EA2 47100	OB USE 4810 5021 CBK
EA1 99116	USE 9375 5000 PULLR	EA2 47214	OB USE 4855 5010 BOLT
EA1 99117	NUT AVAILABLE	EA2 51110	OB USE 5110 5011 FAR
EA11 91311	USE 6548 5010 PLATE	EA2 51211	USE 5141 5010 GRIP
EA13 16100	USE 1600 5030 CARB	EA2 51212	USE 5142 5010 GRIP
EA13 16141	130 USE 1635 5000 130	EA2 61520	USE 6176 5040 CABLE
EA13 17410	USE 87HZ NGK PLUG	EA2 61530	USE 6178 5030 CABLE
EA13 21411	USE 2151 5020 COVER	EA2 62110	USE 6211 5010 CLEAN
EA13 21431	USE 2153 5001 CPVER	EA2 62121	USE 6241 5010 PIPE
EA13 31417	USE 3336 5010 STOP	EA2 62122	USE 6242 5010 JOINT
EA13 31431	USE 0411 1022 WASH	EA2 63111	USE 6351 5010 PIPE
EA13 31433	USE 3389 5010 COLLR	EA2 63300	USE 6301 5020 MUFFL
EA13 31434	USE 0231 1000 NUT	EA2 63313	USE 6320 5010 PIPE
EA13 31437	USE 3336 5010 STOP	EA2 64100	USE 6430 5030 SEAT
EA13 41000	OMB USE 4100 5020 MB	EA2 68121	CUR USE 6821 5070 FAR
EA13 41171	USE 4121 5010 SPRNG	EA2 68121	OB USE 6821 5040 CBK
EA13 41422	USE 3415 5010 BOLT	EA2 72191	USE 7366 5010 BAR
EA13 42110	USE 4411 5011 XCI	EA2 83100	USE 8205 5021 LIGHT
EA13 43111	USE 4511 5040 BAR	EA21 61300	USE 8401 5030 METER
EA13 45100	USE 4751 5030 CASE	EA22 16140	USE 1690 5010 JET
EA13 48100	MB USE 4901 5010 MB	EA22 22240	USE 6186 5020 CABLE
EA13 61610	USE 3810 5021 PEDAL	EA22 23322	USE 2484 5010 SPRKT
EA13 63111	USE 6351 5040 PIPE	EA22 31121	USE 3342 5010 CASE
EA13 63300	USE 6301 5010 MUFFR	EA22 31433	COIL BRACKET
EA13 63310	USE 6301 5010 MUFFR	EA22 31434	USE 3166 5010 BRCKT
EA13 63327	USE 6332 5010 PROTR	EA22 41431	NUMBER PLATE BRAC
EA13 63328	USE 6333 5010 PROTR	EA22 41432	NUMBER PLATE
EA13 63329	USE 6334 5010 BRCKT	EA22 41511	USE 4161 5010 BRDGE
EA13 63331	USE 6335 5010 STAY	EA22 41521	USE 4162 5010 HOLDR
EA13 67110	OB USE 3710 5020 CBK	EA22 43110	USE 4511 8020 BAR
EA13 67121	USE 3711 5010 SHAFT	EA22 61100	CLUTCH GRIP ASSY
EA13 67122	USE 3722 5010 WASH	EA22 61200	THROTTLE GRIP ASS
EA13 67123	USE 09546 104 WASH	EA22 61520	USE 6176 5030 CABLE
EA13 67124	USE 3723 5010 BOLT	EA22 61540	USE 6181 5020 CABLE
EA13 71410	USE 250 X 17 HK TIRE	EA22 61610	USE 3810 5410 PEDAL
EA13 72150	USE 7411 5020 SPRKT	EA22 62100	USE 6201 5010 CLEAN
EA13 73000	USE 7502 5020 EXT	EA22 63300	USE 6310 5020 MUFFR
EA13 91310	USE 6541 5030 RACK	EA22 64100	USE 6430 5020 SEAT
EA2 10000	ENG 90SP USE SC1327	EA22 67110	FOOTREST SOLID TY
EA2 11211	USE 1121 5020 CYLK	EA22 72151	46 USE 7381 5020 46T
EA2 11212	USE 09016 106 STUD	EA22 72151	44 USE 7381 5030 44T
EA2 11411	USE 1141 5010 GASKT	EA22 72151	42 USE 7381 5040 42T
EA2 13100	USE 1301 5010 CRANK	EA22 72151	40 USE 7381 5050 40T
EA2 13111	NOT USED	EA22 72151	38 USE 7381 5060 38T
EA2 13121	NOT USED	EA22 72151	48 NOT AVAILABLE
EA2 13211	USE 1331 5010 ROD	EA22 86100	USE 8601 5010 SWTCH
EA2 13212	USE 1333 5010 BEAR	EA24 61520	USE 6176 5040 CABLE
EA2 13310	USE 1341 5010 PISTN	EA24 61530	USE 6178 5030 CABLE
EA2 13320	USE 1305 5010 RING	EA24 64100	USE 6430 5030 SEAT
EA2 14110	ROTARY VLV OLD STYL	EA24 83100	USE 8205 5021 LIGHT
EA2 14112	USE 1412 5010 VALVE	EAE 11211	USE 1121 5030 CYLR
EA2 14131	USE 1431 5010 COVER	EAE 16100	0 USE 1600 5030 CARB
EA2 16100	USE 1600 5080 CARB	EAE 16141	120 USE 1635 5000 120
EA2 16111	USE 1611 5010 BODY	EAE 17410	USE 87HS NGK PLUG
EA2 16121	USE 1614 5010 VALVE	EAE 31100	OB USE 3110 5011 CBK
EA2 16122	USE 1615 5010 JET	EAE 31100	OMB USE 3110 5011 OMB
EA2 16123	USE 1616 5010 CLIP	EAE 42100	OB USE 4410 5002 CBK
EA2 16124	USE 1617 5010 SEAT	EAE 61200	USE 6104 5020 GRIP
EA2 16125	USE 1618 5010 SPRNG	EAE 61241	USE 6151 5020 COVER
EA2 16126	USE 1619 5010 TOP	EAE 61300	USE 8401 5011 METER
EA2 16127	USE 1621 5010 CAP	EAE 63111	USE 6351 5030 PIPE
EA2 16131	USE 1626 5010 ROD	EAE 81100	USE 8102 5020 LAMP
EA2 16132	USE 1627 5010 SCREW	EAE 81111	MB USE 8111 5020 MB
EA2 16133	USE 1628 5010 SPRNG	EAE 81111	OB USE 8111 5020 CBK
EA2 16141	USE 1635 5010 100	EAE 81111	CUR USE 8111 5020 FAR
EA2 16141	USE 1635 5010 110	EAE 81111	OUR USE 8111 5020 OUR
EA2 16141	120 USE 1635 5010 120	EAE 81112	USE 8125 5020 GROM
EA2 16141	130 USE 1635 5010 130	EAE 81200	USE 8102 5020 LAMP
EA2 16141	140 USE 1635 5010 140	EAE 81210	USE 8140 5010 XCI
EA2 16141	150 USE 1635 5010 150	EAE 81220	USE 8150 5020 LENS
EA2 16141	95 USE 1635 5010 95	EAE 81230	USE 8160 5020 SOCKT
EA2 16142	USE 1633 5010 JET	EAE 83100	USE 8205 5011 LIGHT
EA2 16143	USE 1634 5010 JET	EAE 83110	USE 8240 5010 SOCKT
EA2 16163	USE 1647 5010 CAP	EAE 87110	USE 8701 5010 BATTY
EA2 16181	USE 1666 5010 FLOAT	EAE 88110	USE 8810 5010 WIRE



PART NUMBER	DESCRIPTION	PART NUMBER	DESCRIPTION
EAE 88120	USE 8810 5010 WIRE	GAI 18412	USE 1832 3100 RUBBR
EAE 88121	USE 8824 5010 CONN	GAI 21110	USE 2110 3100 CASE
EAE 91200	USE 6531 3220 RACK	GAI 21114	USE 2112 3000 BUSH
EAE 91710	USE 4410 5012 XCI	GAI 21117	USE 2121 3100 STUD
EAT1 39111	USE 6761 5010 GUARD	GAI 21151	USE 2129 3100 CLAMP
EAT1 42110	USE 4411 5011 XCI	GAI 21181	USE 2187 3100 GASKT
EAT1 42110 MS	USE 4411 5501 MS	GAI 21210	USE 2130 3100 CASE
EAT1 42120	USE 4425 5011 XCI	GAI 21213	USE 2133 3100 BUSH
EAT1 42131	USE 4428 5010 CLAMP	GAI 21222	USE 2142 3100 HOLDR
EAT1 45100	USE 4751 5020 CASE	GAI 21261	USE 09090 107 SEAL
EAT1 71410	USE 250 X 17 TR TIRE	GAI 21311	USE 2160 3100 COVER
EAT1 72150	USE 7411 5010 SPRKT	GAI 21411	USE 2151 3100 COVER
EAT1 72151	USE 7416 5010 SPRKT	GAI 21431	USE 2154 3100 COVER
EAT1 72159	USE 0123 0816 BULT	GAI 21441	USE 09516 101 STUD
EAT1 73000	USE 7502 5010 EXT	GAI 21511	USE 2181 3100 GASKT
GAI 00031	USE 8401 3030 METER	GAI 21512	USE 2183 3100 GASKT
GAI 00046	USE 6615 3110 MARK	GAI 22100	USE 2300 3101 CLUTH
GAI 00047	USE 6615 3120 MARK	GAI 22110	USE 2310 3100 HUB
GAI 00140	USE 6460 3110 SEAT	GAI 22113	USE 2315 3100 BUSH
GAI 00141	USE 6581 3110 RACK	GAI 22114	USE 2317 3100 BOSS
GAI 00250	CFG USE 3260 3130 CFG	GAI 22115	USE 09062 101 ROLLR
GAI 00250 CHG	USE 3260 3130 CHG	GAI 22118	USE 2318 3100 WASH
GAI 00354	CFG USE 8111 3120 CFG	GAI 22119	USE 2319 3100 WASH
GAI 00354 CHG	USE 8111 3120 CHG	GAI 22120	USE 2320 3100 BOSS
GAI 00358	USE 6102 3130 GRIP	GAI 22123 1	USE 2325 3101 SPRNG
GAI 00362	USE 6115 3110 WIRE	GAI 22125	USE 2326 3100 PLATE
GAI 00427	CHG USE 6811 3131 CHG	GAI 22126	USE 2327 3100 PLATE
GAI 00427 CHG	USE 6811 3131 CFG	GAI 22127	USE 2328 3100 PLATE
GAI 00436	USE 3421 3110 BOLT	GAI 22128	USE 09062 102 ROLLR
GAI 00442	USE 6426 3110 PIVUT	GAI 22131 1	USE 2331 3101 SPRNG
GAI 00457	USE 6104 5020 GRIP	GAI 22132	USE 2332 3100 SPRNG
GAI 00458	USE 6102 3130 GRIP	GAI 22133	USE 2333 3100 WASH
GAI 00459	USE 6151 5020 COVER	GAI 22134	USE 09049 103 SHIM
GAI 00461	LENS BLANK	GAI 22135	USE 09002 102 RING
GAI 00463	USE GAI1 00463 WIRE	GAI 22136	USE 2335 3100 HOLDR
GAI 00464	USE GAI1 00464 GRIP	GAI 22137	USE 2336 3100 SPRNG
GAI 01220	NOT AVAILABLE	GAI 22141	USE 2338 3100 COLLR
GAI 08300 1	USE 3610 3100 CHG	GAI 22150 1	USE 2340 3101 HOUSE
GAI 08300 1	USE 3610 3100 CFG	GAI 22155	USE 2345 3100 RING
GAI 10000	ENG HMS USE SC1321	GAI 22161	USE 2351 3100 ROD
GAI 11111	USE 1111 3100 HEAD	GAI 22162	USE 2352 3100 RACE
GAI 11210	USE 1120 3100 CYLR	GAI 22163	USE 2353 3100 CLIP
GAI 11311	USE 1131 3100 ADAPT	GAI 22164	USE 0611 0532 BALL
GAI 11413	USE 1143 3100 GASKT	GAI 22173	USE 2356 3100 SPACR
GAI 11414	USE 1144 3100 GASKT	GAI 22174	USE 2357 3100 NUT
GAI 13100	USE 1301 3100 CRANK	GAI 22211 2	USE 2371 3102 CAM
GAI 13311	USE 07 6303 03BEAR	GAI 22221	USE 2373 3100 ARM
GAI 13411	USE 1336 3100 WASH	GAI 22222	USE 2374 3100 SHAFT
GAI 14141	USE 09090 109 SEAL	GAI 22223	USE 2375 3100 ROLLR
GAI 16100 2	USE 1600 3102 CARB	GAI 22224	USE 2376 3100 CLIP
GAI 16105	USE 1640 3100 LEVER	GAI 22225	USE 2378 3100 SCREW
GAI 16111 2	USE 1611 3102 BODY	GAI 22226	USE 09049 104 SHIM
GAI 16112	NOT AVAILABLE	GAI 22227	USE 09065 101 WASH
GAI 16121	USE 1614 3100 VALVE	GAI 22228	USE 09011 101 BOLT
GAI 16122 2	USE 1615 3102 JET	GAI 22229	USE 2379 3100 SPRNG
GAI 16126	USE 1619 3100 TOP	GAI 22241	USE 2385 3100 COVER
GAI 16127	USE 1622 3100 ADJTR	GAI 22242	USE 2386 3100 GASKT
GAI 16129	USE 1624 3100 GUIDE	GAI 23110	USE 2410 3100 GEAR
GAI 16130	USE 1625 3100 CAP	GAI 23212	USE 2426 3100 GEAR
GAI 16144	NOT AVAILABLE	GAI 23213	USE 2421 3100 SHAFT
GAI 16144 75	JET 75 NOT AVAILABL	GAI 23215	USE 09006 102 RING
GAI 16144 85	USE 1635 3010 85	GAI 23313	USE 2451 3100 GEAR
GAI 16144 90	JET 90 NOT AVAILABL	GAI 23314	USE 2446 3100 SHAFT
GAI 16144 80	USE 1635 3000 80	GAI 23412	USE 2481 3100 SPACR
GAI 16145	USE 1633 3100 JET	GAI 23413	USE 2486 3100 RING
GAI 16146	USE 1634 3101 JET	GAI 23414	USE 09041 109 WASH
GAI 16164	USE 1648 3010 CLIP	GAI 23415	USE 09006 103 RING
GAI 16170	USE 1660 5010 VALVE	GAI 24111	USE 2511 3100 SHAFT
GAI 16173	USE 1665 3100 GASKT	GAI 24150	USE 2554 3100 PLATE
GAI 16181	USE 1666 3100 FLOAT	GAI 24160	USE 2530 3100 STOP
GAI 16182	USE 1667 3100 PIN	GAI 24170	USE 2556 3110 ARM
GAI 16183	USE 1656 3100 CHAMP	GAI 24180 1	USE 2555 3101 PLATE
GAI 16184	USE 1657 3100 PACK	GAI 24210	USE 2510 3100 ARM
GAI 16193	USE 1652 5010 UNION	GAI 24310	USE 2520 3100 DRUM
GAI 16194	USE 1651 5000 BOLT	GAI 24312	USE 2549 3100 GUIDE
GAI 16196	USE 1654 3100 GASKT	GAI 24324	USE 09049 105 SHIM
GAI 17100 1	USE 1701 3101 MAC	GAI 25101	USE 2620 3100 SHAFT
GAI 17201	USE 1710 3100 PLATE	GAI 25110	USE 2620 3100 SHAFT
GAI 17211	USE 1712 3100 COIL	GAI 25200	USE 2680 3100 ARM
GAI 17251	USE 1755 5000 GRUM	GAI 25211	USE 2681 3100 ARM
GAI 18211 0	USE 1821 3100 COVER	GAI 31100	USE 3110 3101 CHG
GAI 18311	USE 1841 3100 COVER	GAI 31100	USE 3110 3101 CCG
GAI 18312	USE 1842 3100 RUBBER	GAI 31210	USE 3260 3130 CHG
GAI 18411	USE 1831 3100 COVER	GAI 31431 0	BOLT CARRIER

PART NUMBER	DESCRIPTION	PART NUMBER	DESCRIPTION
GAL 31432	USE 0411 1022 WASH	GAL 65110	NOT AVAILABLE
GAL 31433	0 WASHER ENGINE	GAL 66111	CHW USE 6610 3120 CHW
GAL 31433	1 USE 09541 104 WASH	GAL 66111	CCG USE 6610 3120 CCG
GAL 31434	0 RUBBER ENGINE	GAL 66112	USE 6622 3100 STAY
GAL 31434	1 USE 3378 3101 RUBBR	GAL 66113	USE 6623 3100 BOLT
GAL 31435	1 USE 3374 3101 BRCKT	GAL 66114	0 USE 09064 102 GASKT
GAL 31436	1 USE 3375 3101 HANGR	GAL 66115	USE 09541 105 WASH
GAL 31437	USE 3378 3101 RUBBR	GAL 66116	USE 6621 3100 STAY
GAL 31438	2 USE 3376 3102 RUBBR	GAL 66117	USE 6624 3100 NUT
GAL 31439	USE 09525 104 NUT	GAL 66118	USE 6615 3110 MARK
GAL 31440	USE 09516 101 STUO	GAL 66211	USE 6711 3100 COVER
GAL 31441	USE 3382 3010 BUSH	GAL 66213	USE 6731 3100 STOP
GAL 31450	USE 3433 3100 LOCK	GAL 66221	USE 6721 3100 COVER
GAL 31459	621 USE 3435 3101 621	GAL 66231	USE 6732 3100 SPACR
GAL 31459	622 USE 3435 3101 622	GAL 66232	USE 6733 3100 GROM
GAL 31459	623 USE 3435 3101 623	GAL 66311	1 USE 6751 3101 CHG
GAL 31459	624 USE 3435 3101 624	GAL 67100	USE 3710 3100 CHG
GAL 31459	625 USE 3435 3101 625	GAL 67110	CFG USE 3710 3100 CHG
GAL 31459	626 USE 3435 3101 626	GAL 67110	CHG USE 3710 3100 CHG
GAL 31459	627 USE 3435 3101 627	GAL 68111	USE 6811 3131 COVER
GAL 31459	628 USE 3435 3101 628	GAL 68120	USE 6831 3100 KNUB
GAL 31460	USE 3341 3100 CHG	GAL 69100	CFG USE 3610 3100 CFG
GAL 42111	CFG USE 4411 3100 CFG	GAL 69100	CHG USE 3610 3100 CHG
GAL 42111	CHG USE 4411 3100 CHG	GAL 82110	CHG USE 8111 3100 CHG
GAL 42112	USE 4433 3100 WASH	GAL 82115	USE 0411 0410 WASH
GAL 43111	1 USE 4511 3101 BAR	GAL 84100	T SIG L H OLD STY
GAL 44100	1 USE 4601 3101 MRROR	GAL 84100	1 USE 8303 3101 LIGHT
GAL 44110	USE 4610 3100 MRROR	GAL 84111	USE 8371 3100 LENS
GAL 44121	1 USE 4621 3101 STAY	GAL 85100	T SIG R H OLD STY
GAL 44122	SET NUT MIRROR	GAL 85100	1 USE 8304 3101 LIGHT
GAL 44140	USE 4622 3102 CLAMP	GAL 85110	1 USE 8601 3100 SWTCH
GAL 44141	USE 0431 0820 WASH	GAL 86100	1 USE 8601 3100 SWTCH
GAL 45100	CFG USE 4701 3100 CFG	GAL 88100	USE 8810 3100 WIRE
GAL 45100	CHG USE 4701 3100 CHG	GAL 88110	USE 8810 3100 WIRE
GAL 51110	CFG USE 5110 3101 CFG	GAL 99000	USE 9300 3110 TOOLS
GAL 51110	CHG USE 5110 3101 CHG	GAL 99111	0 CIRCLIP EXPANDER
GAL 51260	USE 5160 3100 CAP	GAL 99211	0 NOT AVAILABLE
GAL 51271	USE 5171 3100 GASKT	GAL 99212	0 RELEASE CAM ADJ G
GAL 52100	USE 5103 5000 COCK	GAL 99213	0 CLUTCH ADJ GAGE
GAL 52211	USE 5172 3100 TUBE	GAL 99311	0 PUSH RING SOCKET
GAL 61100	USE 6102 3100 GRIP	GAL 99911	0 SPECIAL TOOL BAG
GAL 61111	1 USE 6111 3101 CASE	GAL11 00463	WIRE ASSY
GAL 61112	USE 6112 3100 PLATE	GAL11 00464	THROTTLE GRIP ASS
GAL 61113	USE 6113 3100 BUTTN	GAL11 61152	USE 8332 3110 BULB
GAL 61114	USE 6114 3100 SPRNG	GAL11 61200	USE 6104 3120 GRIP
GAL 61120	USE 6115 3100 WIRE	GAL11 61211	USE 6141 3110 HOLDR
GAL 61130	USE 6123 3100 GRIP	GAL11 61220	USE 6145 3110 WIRE
GAL 61141	1 USE 6121 3101 COVER	GAL11 61245	USE 6146 3110 CLAMP
GAL 61142	USE 6116 3100 CLAMP	GA2 00464	USE GA11 00464GRIP
GAL 61143	USE 6119 5000 KNOB	GA2 83100	USE 8202 3110 LAMP
GAL 61144	USE 6117 3100 CLAMP	GA2 83112	USE 8251 3110 LENS
GAL 61152	USE 8332 3100 BULB	GA2 83114	USE 0342 0436 SCREW
GAL 61153	1 USE 8331 3101 LENS	GA2 96513	USE 0381 0830 SCREW
GAL 61200	USE 6104 3100 GRIP	GA3 11613	USE 1381 3110 PIN
GAL 61211	1 USE 6141 3101 HOLDR	GA3 24150	USE 2554 3110 PLATE
GAL 61220	USE 6145 3100 WIRE	GA3 24170	USE 2556 3110 ARM
GAL 61230	USE 6153 3100 GRIP	GA3 31450	USE 3433 3100 LOCK
GAL 61231	USE 6154 3100 PIPE	GA3 31459	USE 09525 104 NUT
GAL 61232	USE 6155 3100 SHOE	GA3 42441	USE 4435 5010 PLUG
GAL 61233	USE 6156 3100 CABLE	GA3 71110	0 USE 7111 3111 DRUM
GAL 61241	1 USE 6151 3101 COVER	GA3 71114	USE 7114 5000 PIPE
GAL 61242	USE 6146 3100 CLAMP	GA3 71117	USE 09590 104 SEAL
GAL 61244	USE 6147 3100 CLAMP	GA3 71134	USE 09590 105 SEAL
GAL 61260	USE 6152 3100 LEVER	GA3 71142	USE 7149 3110 CONN
GAL 61261	USE 6124 3100 COLLR	GA3 71150	USE 7140 3110 SHOE
GAL 61262	USE 0451 0510 WASH	GA3 71161	USE 7145 3110 SPRNG
GAL 61300	USE 8401 3030 METER	GA3 71171	USE 7151 3110 HUB
GAL 61313	0 EARTH WIRE	GA3 71182	USE 7226 3110 COLLR
GAL 61530	USE 6176 3100 CABLE	GA3 71185	USE 7228 3110 CAP
GAL 61532	USE 9411 3000 CABLE	GA3 71300	USE 7108 3110 SPOKE
GAL 61610	USE 3810 3100 PEDAL	GA3 71300	USE 7108 3110 EA
GAL 62100	USE 6201 3100 CLEAN	GA3 72110	USE 7311 3111 HUB
GAL 62110	USE 6211 3100 ELEM	GA3 72114	USE 7314 5000 PIPE
GAL 62112	USE 6222 3100 COVER	GA3 72117	USE 09590 106 SEAL
GAL 62113	USE 6241 3100 PIPE	GA3 72118	USE 09566 101 RING
GAL 62115	CCG AIR CAP GRAY	GA3 72119	1 USE 7319 3111 DAMPR
GAL 62115	CHW USE 6235 4100 CHW	GA3 72131	USE 7371 3110 FLANG
GAL 63111	1 USE 6351 3101 PIPE	GA3 72132	USE 07 6203 03BEAR
GAL 63300	USE 6301 3100 MUFFR	GA3 72133	USE 09590 107 SEAL
GAL 63327	CFG USE 3334 3100 CFG	GA3 72134	USE 09507 101 RING
GAL 63327	CHG USE 3334 3100 CHG	GA3 72141	USE 7376 5001 FLANG
GAL 64100	NUT AVAILABLE	GA3 72142	USE 7377 3110 COLLR
GAL 64110	USE 6410 3000 SEAT	GA3 72143	USE 4861 3110 ADJTR
GAL 65100	NUT AVAILABLE	GA3 72144	USE 7379 3111 NUT

PART NUMBER	DESCRIPTION	PART NUMBER	DESCRIPTION
GA3 72151	USE 7381 3110 SPRKT	GB1 31416	USE 3319 3200 CAP
GA3 72153	USE 09511 112 BOLT	GB1 31418	NOT USED
GA3 72160	USE 7331 3111 PANEL	GB1 31419	OUR NOT AVAILABLE
GA3 72171	USE 7351 3110 HUB	GB1 31433	USE 3315 3200 RACE
GA3 72181	USE 7421 3110 SHAFT	GB1 31436	USE 3324 3200 SHAFT
GA3 72182	USE 7426 3110 COLLR	GB1 31437	USE 3325 3200 STOP
GA3 72184	USE 7422 3110 NUT	GB1 31438	GUIDE
GA3 72300	USE 7308 3110 SPOKE	GB1 31439	USE 09546 102 WASH
GA3 72300	USE 7308 3110 EA	GB1 31459	511 USE 3435 3200 511
GB1 11111	USE 1111 3200 HEAD	GB1 31459	512 USE 3435 3200 512
GB1 11211	USE 1121 3230 CYLDR	GB1 31459	513 USE 3435 3200 513
GB1 11411	USE 1141 3200 HEAD	GB1 31459	514 USE 3435 3200 514
GB1 11413	USE 1143 3200 PACK	GB1 31459	515 USE 3435 3200 515
GB1 13100	USE 1392 3210 CRANK	GB1 31459	516 USE 3435 3200 516
GB1 13151	USE 1321 3200 PIN	GB1 31459	517 USE 3435 3200 517
GB1 13152	NUT AVAILABLE	GB1 31459	518 USE 3435 3200 518
GB1 13153	NOT AVAILABLE	GB1 31459	519 USE 3435 3200 519
GB1 13210	USE 1331 3210 ROD	GB1 31459	520 USE 3435 3200 520
GB1 13320	USE 1305 3200 RINGS	GB1 31459	527 USE 3435 3200 527
GB1 13320	25 USE 1306 3200 25	GB1 31459	528 USE 3435 3200 528
GB1 13320	50 USE 1307 3200 050	GB1 31459	529 USE 3435 3200 529
GB1 13332	USE 1382 3200 CLIP	GB1 31459	530 USE 3435 3200 530
GB1 13421	1 USE 1385 3201 GEAR	GB1 41000	CBK USE 4100 3200 CBK
GB1 14112	USE 1412 3210 VALVE	GB1 41000	OUR USE 4100 3211 OUR
GB1 14121	USE 1451 3200 COLLR	GB1 41100	1 USE 4111 3201 TUBE
GB1 14131	USE 1431 3200 COVER	GB1 41110	0 USE 4111 3201 TUBE
GB1 14141	USE 09090 109 SEAL	GB1 41110	1 USE 4111 3201 TUBE
GB1 16100	USE 1600 3210 CARB	GB1 41120	USE 4113 3200 TUBE
GB1 17111	USE 1791 3210 MAG	GB1 41171	USE 4121 3200 SPRNG
GB1 17212	USE 1713 3200 COIL	GB1 41172	USE 4122 3200 GUIDE
GB1 17230	USE 1752 5000 POINT	GB1 41173	USE 4126 3200 NUT
GB1 17251	USE 1755 3200 GRUM	GB1 41173	1 USE 4126 3201 NUT
GB1 17410	USE 675 NGK PLUG	GB1 41182	USE 4124 3200 BOLT
GB1 18100	COOLING KIT	GB1 41183	USE 09546 103 WASH
GB1 21110	USE 2110 3200 CASE	GB1 41220	USE 4133 3200 TUBE
GB1 21122	USE 07 6001 01 BEAR	GB1 41310	USE 4151 3200 BRDGE
GB1 21127	USE 2121 3200 STUD	GB1 41321	USE 09511 124 BOLT
GB1 21210	USE 2130 3200 CASE	GB1 41410	CBK USE 4171 3200 CBK
GB1 21213	USE 2133 3200 BUSH	GB1 41410	OUR USE 4171 3210 CUR
GB1 21222	USE 07 6005 01 BEAR	GB1 41420	CBK USE 4181 3200 CBK
GB1 21224	USE 2145 3200 HOLDR	GB1 41420	OUR USE 4181 3210 CUR
GB1 21310	USE 2160 3200 COVER	GB1 41511	USE 4161 3200 BRDGE
GB1 21411	USE 242 34302 200	GB1 41521	USE 4162 3200 HOLDR
GB1 21412	USE 2152 3200 COVER	GB1 42221	DISCONTINUED
GB1 21511	USE 2181 3200 PACK	GB1 47110	OMB USE 4810 3200 MB
GB1 21512	USE 2183 3200 GASKT	GB1 48100	CUR USE 4901 3200 CUR
GB1 21514	USE 2184 3200 PACK	GB1 48100	OB USE 4901 3200 CBK
GB1 22111	USE 2221 3201 HUB	GB1 51110	OB USE 5110 3200 CBK
GB1 22112	USE 2210 3200 PLATE	GB1 51110	MB USE 5110 3200 MB
GB1 22122	USE 09041 110 WASH	GB1 51110	OMB USE 5110 3200 MB
GB1 23110	USE 2411 3201 GEAR	GB1 51110	OUR USE 5110 3200 CUR
GB1 23211	USE 2421 3200 SHAFT	GB1 51211	USE 5141 3200 GRIP
GB1 23212	USE 2426 3200 GEAR	GB1 51212	USE 5142 3200 GRIP
GB1 23213	USE 2431 3200 GEAR	GB1 51300	USE 5102 3200 CAP
GB1 23214	USE 2436 3200 GEAR	GB1 61300	USE 8401 3210 METER
GB1 23215	USE 09002 104 RING	GB1 62110	USE 6211 3200 CLEAN
GB1 23220	USE 2610 3200 GEAR	GB1 63111	USE 6351 3200 PIPE
GB1 23231	USE 2418 3200 BUSH	GB1 63123	1 USE 6361 3201 NUT
GB1 23232	USE 2419 3200 WASH	GB1 63300	USE 6310 3200 MUFFR
GB1 23311	USE 2446 3200 SHAFT	GB1 63308	USE 6310 3200 MUFFR
GB1 23312	USE 2451 3200 GEAR	GB1 63313	USE 6320 3200 PIPE
GB1 23313	USE 2456 3200 GEAR	GB1 66410	USE 3610 5000 CBK
GB1 23314	USE 2461 3200 GEAR	GB1 66421	USE 3621 3200 TUBE
GB1 23315	USE 2466 3200 GEAR	GB1 67110	CBK USE 3710 3200 CBK
GB1 23316	USE 2616 3200 GEAR	GB1 69100	USE 9201 3201 TOOLS
GB1 23318	USE 2481 3200 SPACR	GB1 71020	USE 7101 3200 WHEEL
GB1 23321	USE 2483 3200 COLLR	GB1 71130	USE 7130 3200 PANEL
GB1 24110	USE 2510 3201 SHAFT	GB1 71130	1 USE 7130 3201 PANEL
GB1 24210	USE 2502 3200 DRUM	GB1 71141	USE 7148 3201 GEAR
GB1 24212	USE 2522 3200 PIN	GB1 72020	USE 7301 3200 WHEEL
GB1 24213	USE 2523 3200 STOP	GB1 72131	USE 7371 3200 FLANG
GB1 24214	USE 2524 3200 HOLDR	GB1 72151	USE 7381 3200 SPRKT
GB1 24215	USE 2541 3200 FORK	GB1 73000	USE 7501 3200 CHAIN
GB1 24216	USE 2544 3200 PIN	GB1 86100	USE 8601 3200 SWTCH
GB1 24221	USE 2549 3200 PLATE	GB1 88300	USE 8802 3200 FUSE
GB1 24231	USE 2531 3200 STOP	GB1 89510	USE 8702 5000 RECTR
GB1 25112	USE 2631 3200 GEAR	GB11 42110	USE 4410 3211 MS
GB1 25132	USE 2638 3200 SPACR	GB11 42117	USE 4423 3210 MS
GB1 31100	OB USE 3110 3220 CBK	GB11 42118	USE 4424 3210 MS
GB1 31100	OUR USE 3110 3220 CBK	GB11 47110	OB USE 4810 3200 CBK
GB1 31320	USE 3331 3200 TUBE	GB11 47110	OUR USE 4810 3200 CUR
GB1 31411	USE 3314 3200 RACE	GB12 10000	ENG 50SP USE SC1324
GB1 31412	USE 3311 3200 RACE	GB12 11211	USE 1121 3230 CYLDR
GB1 31414	USE 3321 3200 NUT	GB12 13310	USE 1341 3230 PISTN

PART NUMBER			DESCRIPTION	PART NUMBER			DESCRIPTION
GB12	13310	25	USE 1342 3230 25	VM15	31	T	USE 1627 5000 SCREW
GB12	13310	50	USE 1343 3230 50	VM15	41	J	USE 1615 3021 JET
GB12	91200		USE 6531 3220 RACK	VM15	42	P	USE 1631 3010 SCREW
GB2	11111		USE 1111 3210 HEAD	VM22	140		USE 1634 3110 JET
GB2	11211		USE 1121 3220 CYLDR	BV26	22		USE 1667 3100 PIN
GB2	11411		USE 1141 3210 GASKT	M10	14		USE 1635 5000 110
GB2	13111		NOT USED	M10	18E		USE 1654 3100 GASKT
GB2	13112		NOT USED	M12F	46A		USE 1632 3010 SPRNG
GB2	13152		USE 1325 3210 BEAR	M21	14		USE 1622 5000 ADJTR
GB2	13153		USE 09063 103 ROLLR	M21	15		USE 1623 5000 NUT
GB2	13211		USE 1331 3210 ROD	SM18	F	46A	USE 1628 5000 SPRNG
GB2	13212		USE 1333 3210 BEAR	W4	04	0	USE 0431 0410 WASH
GB2	13320		USE 1305 3210 RINGS	C2	0414		USE 0311 0414 SCREW
GB2	13320	25	USE 1306 3210 25	4N	00006		NUT AVAILABLE
GB2	13320	50	USE 1307 3210 50	6N	00003		USE 0221 0300 NUT
GB2	13413		USE 09063 104 ROLLR	6N	00004		USE 0211 0400 NUT
GB2	14110		USE 1412 3210 VALVE	6N	00005		USE 0211 0500 NUT
GB2	14112		USE 1412 3210 VALVE	6N	00006		USE 0231 0600 NUT
GB2	14121		USE 1451 3210 COLLR	6N	00008		USE 0231 0800 NUT
GB2	41000	0B	NOT USED	6N1	00003		USE 0221 0300 NUT
GB2	41000	0UR	USE 4100 3211 0UR	6N1	00004		USE 0211 0400 NUT
GB2	41110		USE 4111 3210 TUBE	6N1	00005		USE 0211 0500 NUT
GB2	41110	1	USE 4111 3211 TUBE	6N1	00006		USE 0222 0600 NUT
GB2	41120		USE 4113 3210 TUBE	6N1	00008		USE 0211 0800 NUT
GB2	41120	1	USE 4113 3211 TUBE	6N1	00010		USE 0231 1000 NUT
GB2	41131		USE 4114 3210 TUBE	6N2	00006		USE 0222 0600 NUT
GB2	41132		USE 09566 103 RING	6N3	3		USE 0221 0300 NUT
GB2	41133		USE 09590 109 SEAL	6N3	00010		USE 0231 1000 NUT
GB2	41134		USE 4115 3210 SEAT	6N3	00012		USE 0231 1200 NUT
GB2	41161		USE 0111 0508 BOLT	6B	3X10		USE 0121 0312 BOLT
GB2	41162		USE 4118 3210 GASKT	6B	3X12		USE 0121 0312 BOLT
GB2	41171		USE 4121 3210 SPRNG	6B	4X10		USE 0121 0410 BOLT
GB2	41172		USE 4122 3210 GUIDE	6B	5 X 6		USE 0121 0506 BOLT
GB2	41181		USE 09566 104 RING	6B	5X8		USE 0121 0508 BOLT
GB2	41182		USE 4124 8000 BOLT	6B	5 X10		USE 0121 0510 BOLT
GB2	41183		USE 09541 108 WASH	6B	5 X12		USE 0113 0512 BOLT
GB2	41210	0	USE 4131 3210 TUBE	6B	5 X16		USE 0111 0516 BOLT
GB2	41210	1	USE 4131 3211 TUBE	6B	5 X18		USE 0111 0518 BOLT
GB2	41251		USE 09511 125 BOLT	6B	5X38		NOT AVAILABLE
GB2	41310		USE 4151 3210 CBK	6B	6 X 8		USE 0112 0608 BOLT
GB2	41410	0UR	USE 4171 3210 CUR	6B	6 X10		USE 0111 0610 BOLT
GB2	41420	0UR	USE 4181 3210 CUR	6B	6 X14		USE 0112 0614 BOLT
GB2	41511		USE 4161 3210 BRDGE	6B	6 X16		USE 0111 0616 BOLT
GB2	99118		SPANNER FRONT FOR	6B	6 X18		USE 0111 0618 BOLT
GB21	10000		ENG 60SP USE SC1325	6B	6 X20		USE 0113 0620 BOLT
GB21	11111		USE 1111 3210 HEAD	6B	6 X25		USE 0113 0625 BOLT
GB21	13310		USE 1341 3220 PISTN	6B	6X30		USE 0111 0630 BOLT
GB21	13310	25	USE 1342 3220 PISTN	6B	6 X65		USE 0111 0665 BOLT
GB21	13310	50	USE 1343 3220 PISTN	6	8 6X8	0	USE 0311 0678 SCREW
GB21	17100		USE 1790 3210 MAG	6B	8 X16		USE 0111 0818 BOLT
GB21	17210		USE 1792 3210 FRAME	6B	8X18		USE 0111 0818 BOLT
GB21	17213		USE 1714 3200 COIL	6B	8 X22		USE 0112 0822 BOLT
GB21	17410		USE NGK 885 PLUG	6B	8 X25		USE 0111 0825 BOLT
GB21	31100	0B	USE 3110 3220 CBK	6B	8 X28		USE 0111 0830 BOLT
GB21	31100	0UR	USE 3110 3220 CBK	6B	8X30		USE 0111 0830 BOLT
GB21	31417		USE 3336 3210 STOP	6B	8 X32		USE 0111 0832 BOLT
GB21	42111	XCI	USE 4410 3231 XCI	6B	8 X38		USE 0121 0838 BOLT
GB21	42114		USE 4412 3220 XCI	6B	8 X50		USE 0122 0850 BOLT
GB21	42117		USE 4423 3220 XCI	6B	8 X55		USE 0122 0855 BOLT
GB21	42118	XCI	USE 4424 3220 XCI	6B	8 X62		USE 0113 0862 BOLT
GB21	61300		USE 8401 3210 METER	6B	8 X65		USE 0121 0865 BOLT
GB21	63111		USE 6351 3210 PIPE	6B	8 X88		USE 0113 0890 BOLT
GB21	73000		USE 7501 3210 CHAIN	6B	8X102		USE 09511 115 BOLT
VF14	SC6	19A	USE 1660 5010 VALVE	6B	8X104		USE 09511 103 BOLT
VF14	T1	39	USE 1652 5010 CONN	6B	8X106		USE 09511 114 BOLT
VF14	T2	08	USE 1651 5000 BOLT	6B	8X108		USE 09511 101 BOLT
VM10	31A		USE 1616 3021 CLIP	6B	8X114		USE 09511 113 BOLT
VM13	21		USE 1633 3100 JET	6B	8X118		USE 09511 110 BOLT
VM14	SC1	80	USE 1613 3020 CLAMP	6B	8X128		USE 09511 110 BOLT
VM14	SC4	16A	USE 1666 3100 FLOAT	6B	10X30		USE 0123 1030 BOLT
VM14	C1	38A	USE 1617 3021 SEAT	6B	10X40		USE 0123 1040 BOLT
VM15	07A		USE 1665 3100 GASKT	6B	10X10	4	USE 09511 102 BOLT
VM15	12B		USE 1657 3100 PACK	6BA	5 X14		USE 0113 0514 BOLT
VM15	20		USE 0211 0500 NUT	K6B	12X3	8	USE 09511 104 BOLT
VM15	23A		USE 1614 5000 VALVE	K6N	3 12		USE 09521 103 NUT
VM15	SC10	01	USE 1611 5000 BODY	KHW	8		USE 0411 0818 WASH
VM15	SC4	85	USE 1645 5000 PLUNG	HW	00003		USE 0411 0308 WASH
VM15	SC6	88	USE 1647 5000 CAP	HW	00004		USE 0411 0410 WASH
VM15	SC6	89	USE 1646 5000 SPRNG	HW	00005		USE 0411 0512 WASH
VM15	24		USE 1618 5000 SPRNG	HW	00006		USE 0411 0613 WASH
VM15	25A		USE 1619 5000 TOP	HW	00008		USE 0411 0818 WASH
VM15	26		USE 1621 5000 CAP	HW	00010		USE 0411 1022 WASH
VM15	27		USE 1626 5000 ROD	SW	00002		USE 0431 0205 WASH
VM15	28A		USE 1656 5000 BODY	SW	00003		USE 0431 0307 WASH